

Infresco T 6kW User Manual

X20021 Issue 4 Date 1/02/16 Page 1 of 8



KEY FEATURES

- Energy saving.
 - o provides heat for a pre-determined time period.
- Extends lamp Life.
- Energy saving.
- Control up to 4 x 1500W lamps.
- Low-cost.
- Soft-start/zero-voltage switch-off.
- Easy to install.

TECHNICAL SPECIFICATION

Supply Voltage 230VAC +/- 10% 50/ 60 Hz

Switching Capacity 6kW Max.

Lamp On-Time 1 to 60 minutes

Current Consumption (control circuit) 20mA

Terminals 6.0mm² Rising Clamp

Operating Temperature -20 to 40°C

Protection Rating IP65

Gland Diameter Max Cable Entry 2.5mm²

Enclosure Dimensions (W x L x H) 130x130x75 (mm

INTRODUCTION

The Infresco-T 6kW is part of a family of controllers designed to provide energy saving when used with quartz infrared halogen lamps or other heating and lighting products. The 'T' model switches the lamps on for a predetermined time period of between 1 and 30 minutes. The microcontroller-based unit incorporates zero-voltage switching and a soft-start function to eliminate the lamps' initial high inrush current – potentially increasing lamp life by as much as 30%. Installation of the unit is simple and once installed is relatively maintenance-free

INSTALLATION

SAFETY FIRST!

Please read these instructions before installing and operating this product.

The Infresco- unit should be positioned with the three fixed cable glands facing down and securely fixed via the four mounting holes accessible from the front of the unit. Round cable is recommended to avoid water ingress.

WIRING

It is recommended that installation and maintenance of this equipment should be done with reference to the current edition of the I.E.E. wiring regulations (BS7671) by suitably qualified/trained personnel. These regulations contain important requirements regarding safety of electrical equipment (for International Standards refer to I.E.C/ directive IEC950).

Warning! Isolate the mains supply before commencing any work on the unit. Failure to do so could result in serious injury or fatality.

The unit is fitted with three cable glands. Only one cable should be fitted per gland to prevent degrading the unit's IP rating. To connect 4 lamps, refer to the 'Wiring Diagram' on the next page for an alternative configuration using two junction boxes.

The mains supply connects to the terminal block marked 'LINE'. Connect the supply LIVE to the 'L' terminal, **NEUTRAL** to the 'N' terminal and **EARTH** to the 'E' terminal.

The lamps connect to the terminal block marked 'LOAD'. Connect the load LIVE to the 'L' terminal, NEUTRAL to the 'N' terminal and EARTH to the 'E' terminal.


Important! Ensure all earth wires are connected to maintain earth continuity to the lamp fittings.

Check all wiring and make sure the cable glands are tightened.

COMMISSIONING


Set the on-time preset (VR2) to a time period of between 1 and 60 minutes (see 'Mounting Template' to locate VR2). Replace the lid and switch on the mains supply to the unit. Press the push-button on the front of the unit to switch the lamps on.

WIRING DIAGRAM

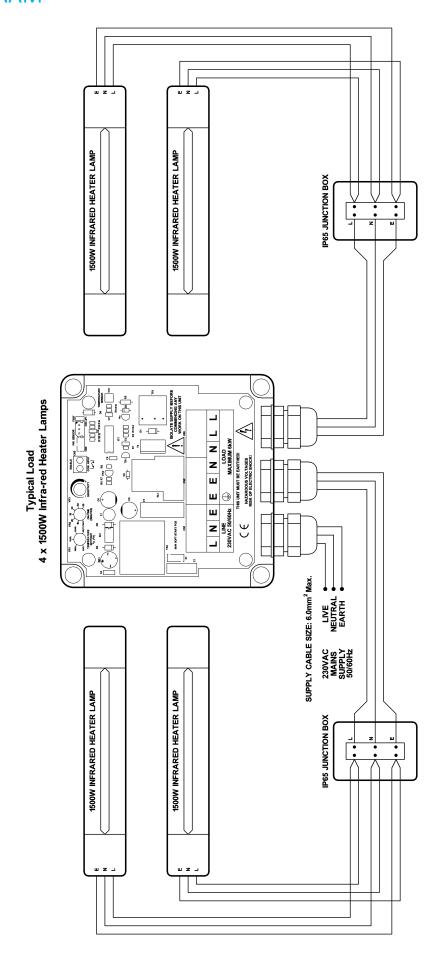

MOUNTING TEMPLATE

IMPORTANT! When wall mounting, the unit must be orientated with the cable glands facing down.

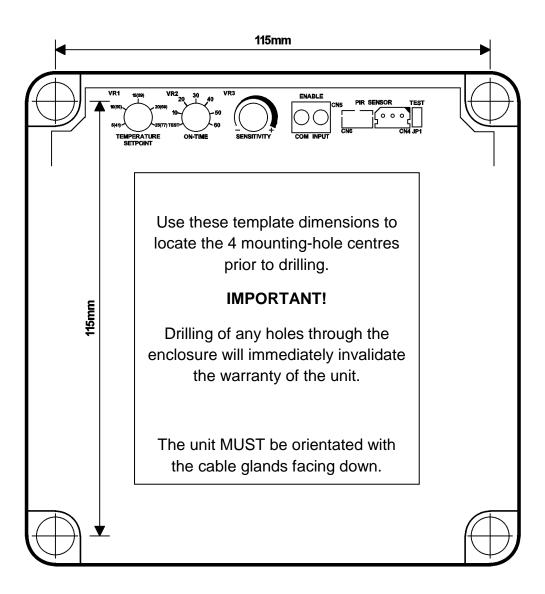

TROUBLESHOOTING

Warning! Isolate the mains supply before commencing any work on the unit. Failure to do so could result in serious injury or fatality.

Problem: Lamps do not switch on.

Solution:

- Check the mains supply to the unit is switched on.
- Check the LINE and LOAD wiring connections to the unit and lamps. Fit a lamp that you know is in working order.
- · Contact your supplier.

Problem: Lamps do not switch off.

Solution:

- Check the on-time preset (VR2) is set correctly.
- · Contact your supplier.

RECOMMENDATION & SAFETY REQUIREMENTS

SUPPORTING DATASHEETS FOR PRODUCTS AND APPLICATIONS

Other documents, which may be appropriate for your applications, are available on request.

CODE	<u>IDENTITY</u>	DESCRIPTION
X10255	SRA	Safety requirements: Addressing the Low Voltage Directive (LVD) including, Thermal data/cooling, Live parts warning Earth requirements and Fusing recommendations.
P01.1	cos	UAL Conditions of sale.

NOTE:

It is recommended that installation and maintenance of this equipment should be carried out by suitably qualified personnel, with reference to the current edition of the I.E.E. Wiring Regulations BS7671. The regulations contain important requirements regarding the safety of electrical equipment.





Not for general waste

PRODUCT APPLICATION

- Patio areas.
- Smoking shelters.
- Restaurants.
- Warehouses.
- Workshops.
- Garden lighting.
- Livery stables.

